

SAFETY TURTLETM SOS SENSORS

READ THESE INSTRUCTIONS IN ADDITION TO THE SAFETY TURTLE USER GUIDE

1. **Warning:** SOS sensors are NOT intended for use on young children.
2. **Warning:** Reliable alarming depends on unobstructed fill holes. See fig 1. Periodically check and clear the four fill holes.
3. **Warning:** When used in sea water, SOS sensors should be worn on the upper torso so as to immerse then break the surface of the water. See fig. 3a.
4. **Warning:** SOS wristbands do not float.
5. SOS wristbands can be attached around wrist or more tightly to a life vest or rescue tube strap. See fig. 2 & fig. 3a and 3b.
6. When completely immersed, the cavity of the SOS sensor immediately fills with water as illustrated in fig. 4. Alarming will occur when the cavity is about ½ full.
7. Water must be drained from the SOS sensor as illustrated in Fig 3.0. The sensor will cease transmitting in a few seconds.
8. There is no need to towel dry the SOS sensor.
9. **Warning:** Do not attempt to separate the plastic shells of the SOS sensors. If alarming does not stop immediately, ensure the holes are clear, shake gently and let air dry.

Figure 1

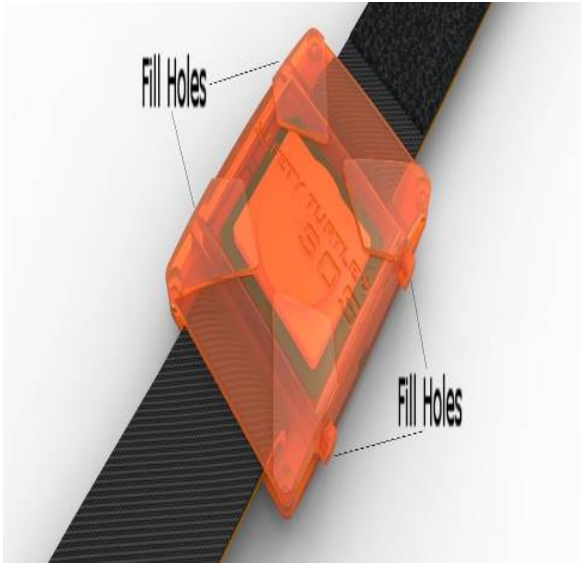


Figure 2



Figure 3a



Figure 3b



Figure 4

